

Wireless Remote Control Instructions

RUNVA wireless remote works lets you operate your winch from up to 50 ft without cables or switches. Just press the remote transmitter and you're ready to operate your winch Start, stop, in or out.

- ◆ Remote range up to 50 ft.
- ◆ Transmitter equipped with long life.
- ◆ battery and power saver circuit.
- ◆ transmitter & receiver.
- ◆ Visual indicator light shows remote operation.
- ◆ Additional transmitters available to operate receiver.
- ◆ Installs in minutes.
- ◆ Transmitter replacement battery readily available.

WARNING: The Wireless Remote is designed for use on front mount self-recovery winches only. The remote is not designed for and should not be used on winches or hoists in industrial applications (commercial car haulers/carriers, wreckers, cranes, etc.) or for any other remote controlled applications.

Type:

RWRC①—②—③—④—⑤

- ①: Signed as 01, 02. "01": Code learning Type; "02": Code Fixed.
- ②: Using Range admitted. Signed as E, C, "E": European Using Style; "C" Common style, this letter is always leave out;
- ③: Power Voltage, Signed as 12VDC.
- ④: Connector Style, using solely out of the winches control box. Signed as 03, 04. "03": three cores connector;
"04": four cores of connector.
- ⑤: mount type, Signed as 05.
"05": small remote can fix in the winches control box.

Part List:

1. one transmitter.
2. one receiver with three or four cores of line with connector.


Installation and operating instructions:

There are two kinds of different connect way for the reason of different kinds winche solenoid female connector. You can choice a suitable type of wireless remote control RWRC—03 or RWRC—04. showing as the following connection drawing.

RWRC—03: While you insert the receiver plug to the winches' solenoid female connector you should connect the earth line to the battery negative. Be sure of the earth line connect exactly, then you can operate your winch by press the button on the transmitter.

RWRC—04: While you are ready to operate a winch, just connect the four cores of the receiver to the winches' solenoid female connector. And then you can operate your winch by press the button on the transmitter. **NOTE:** Make sure one of the four pole receptacle connected to earth.

"03", "04" connection drawing:

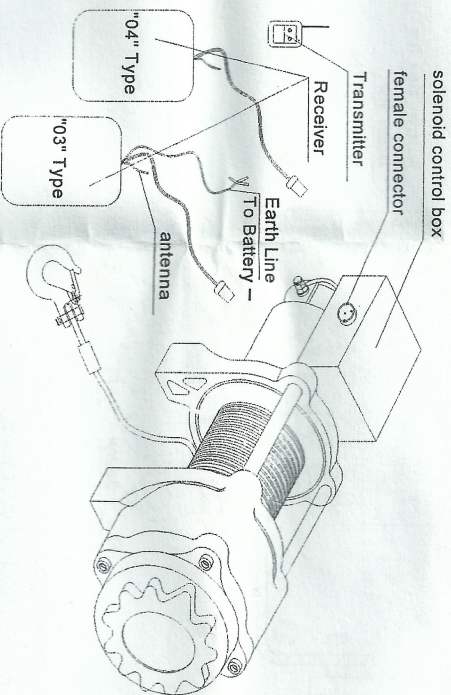

There is a small remote can be fixed in the winches control box: