



RWRC-05: while your fixing according to the drawings showing as follows:

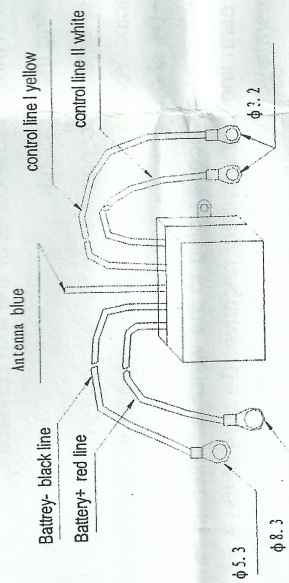

Receiver

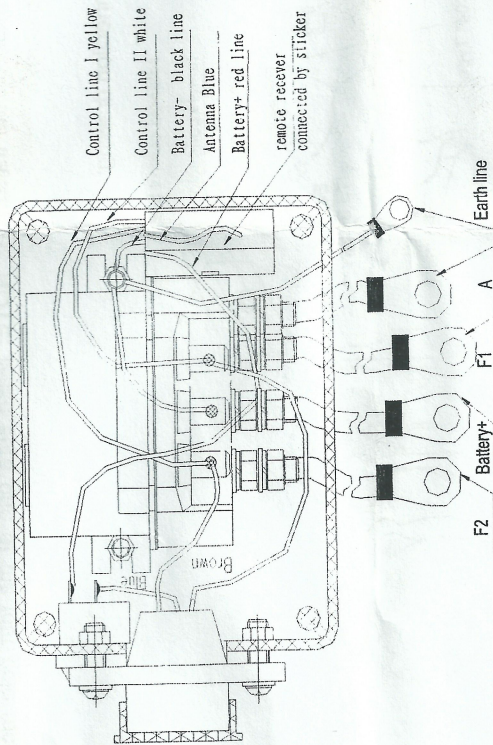

We suggest operate your winch as follows:

1. Disengage the clutch of your winch.
2. Pull out the winch wire rope about 1.5 meters.

3. Reengage the clutch of your winch.
4. Insert the plug of remote control receiver into the winches' solenoid control box female connector, if your wireless remote control is —03 type, you should properly connect the black earth line to the battery negative.
5. Put your receiver at a certain place.
6. Keep the antenna of receiver out and straight.
7. Pull out the antenna of transmitter, and move down the cover of your transmitter bare out the control button.
8. Press the button, you can operate your winch start, stop, in and out.

Trouble Shooting:

SYMPTOM	POSSIBLE CAUSE	SUGGESTED ACTION
Motor turns, but Winch does not work,	Defective winch.	Check the winch Operating instructions.
Motor does not turn, but you can hear "Click" sound in the receiver	Receiver Loose connections to the winch.	Reinsert all the way.
	False Earth line connection	Ensure the earth connections.
	Defective winch.	Check the winch Operating instructions
Motor runs in one direction only	Receiver Loose connections to the winch.	Reinsert all the way.
	Defective winch.	Check the winch Operating instructions
No actions	Receiver and transmitter does not matching.	"01" Type : Code learn. "02" Type : return to the manufacture t rematch.